


Floor scale KERN BFB



Weighing bridge with screwed-on weighing plate (IP67)
and XXL display device, with EC type approval [M]

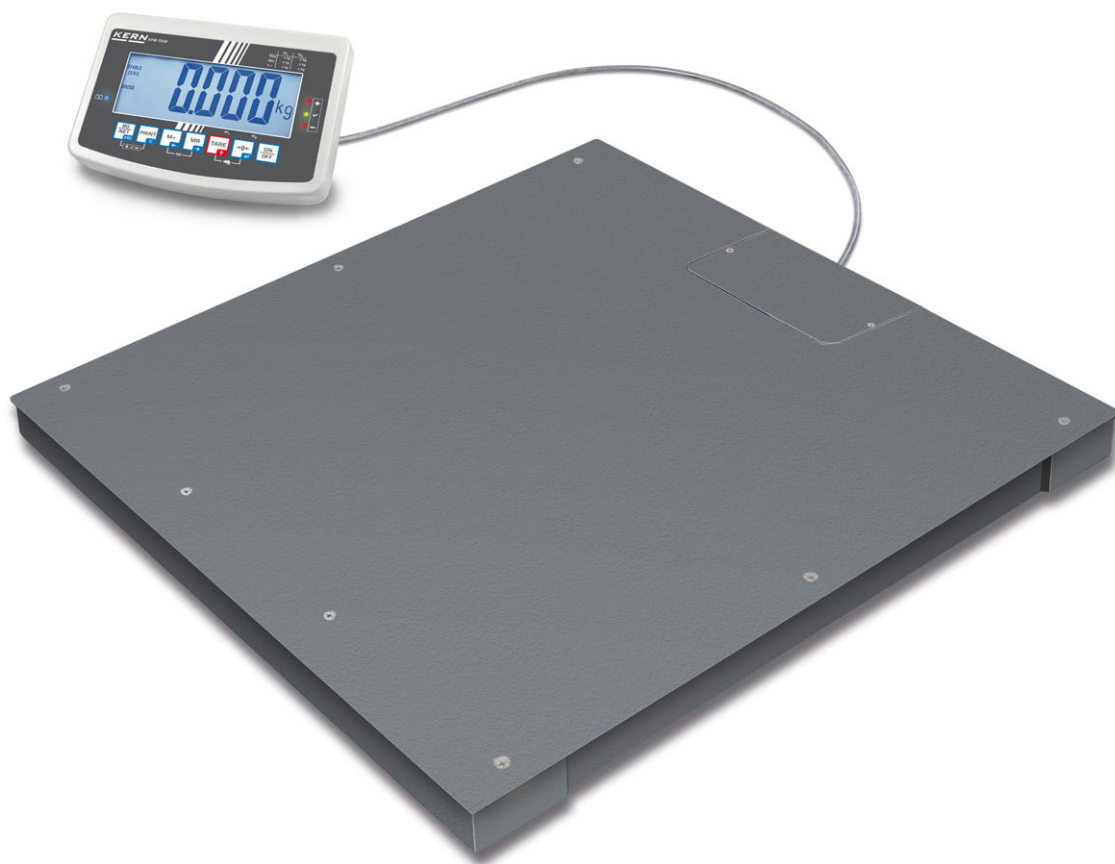

Weighing plate can be unscrewed
The weighing plate can be conveniently unscrewed for maintenance or cleaning purposes (weighing plate size [A](#), [B](#))





Easy levelling of the weighing bridge as well as access to the junction box from above



Did you know? Our floor scales are delivered in a robust wooden box. This protects the high-quality weighing technology from environmental influences and stresses during transportation. KERN – always one step ahead

Floor scale KERN BFB

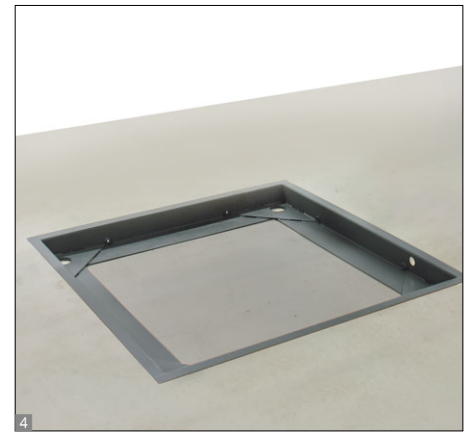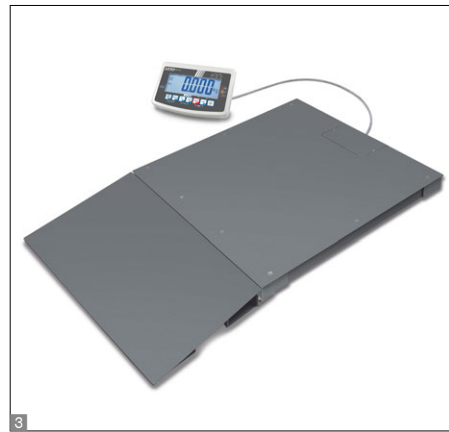

Features

- **Weighing plate** **A**, **B** screwed on from the top, so it's easy to remove, hygienic and easy to clean
- **1 Weighing bridge:** steel, painted, weighing plate size **C**, **D** corrugated steel plate, welded, 4 silicone-coated steel load cells, dust and spray protection IP67
- **Display device:** for details see KERN KFB-TM
- **Benchtop stand incl. wall mount** for display device as standard
- **Totalising** of weights and piece counts
- **Protective working cover** included with delivery

Technical data

- Large backlit LCD display, digit height 52 mm
- Weighing plate dimensions W×D×H
 - A** 1000×1000×85 mm
 - B** 1500×1250×85 mm
 - C** 1500×1500×80 mm
 - D** 1500×1500×130 mm
- Dimensions of display device W×D×H 250×160×58 mm
- Cable length of display device approx. 5 m
- Permissible ambient temperature -10 °C/40 °C

Accessories

- **Protective working cover**, scope of delivery: 5 items, KERN KFB-A02S05
- **2 Stand** to elevate display device, height of stand approx. 800 mm, KERN BFS-A07
- **Pair of base plates** to fix the weighing bridge to the floor, for models with weighing plate size **A**, **B**, **C** KERN BFS-A06N **D** KERN BFS-A10
- **3 Ascending ramp**, steel, lacquered, not included, for models with weighing plate size **A** KERN BFS-A01N **B** KERN BFS-A02N **C** KERN BFS-A09 **D** KERN BFS-A11
- **4 Stable pit frame**, steel, lacquered, for models with weighing plate size **A** KERN BFS-A03N **B** KERN BFS-A04N **C** KERN BFS-A08
- **Rechargeable battery pack internal**, operating time up to 35 h without backlight, charging time approx. 10 h, must be ordered at purchase, KERN KFB-A01
- **Bluetooth data interface** for wireless data transfer to PC or tablets, must be ordered at purchase, not in combination with verification, not possible in combination with RS-232


data interface, KERN KFB-A03

- **Analogue module**, must be ordered at purchase, not possible in combination with signal lamp
0-10 V: KERN KFB-A04
4-20 mA: KERN KFB-A05
- **Signal lamp** for visual support of weighing with tolerance range, KERN CFS-A03
- **Large display with superior display size**, KERN YKD-A02
- **Cable with special length** 15 m, between display device and platform, for verified models which must be ordered at the time of purchase, KERN BFB-A03
- Further details, plenty of further accessories and suitable printers see *Accessories*

Note: For verified scales the weighing bridge must be fixed to the floor. Optionally, with an access ramp, a footplate pair or a pit frame

1 Shipment via freight forwarder. Please ask for dimensions, gross weight, shipping costs

STANDARD



OPTION



FACTORY



Model	Weighing capacity [Max] kg	Readability = Verification value [d] = [e] kg	Minimal load [Min] kg	Net weight approx. kg	Weighing plate	Option		
						Verification		DAkkS Calibr. Certificate
						MID KERN		DAkkS KERN
BFB 600K-1SNM	600	0,2	4	105	A	965-230		963-130
BFB 600K-1NM	600	0,2	4	135	B	965-230		963-130
BFB 1T-4SNM	1500	0,5	10	100	A	965-230		963-130
BFB 1T-4NM	1500	0,5	10	135	B	965-230		963-130
BFB 3T-3NM	3000	1	20	135	B	965-232		963-132
BFB 3T 1LM	3000	1	20	155	C	965-232		963-132
BFB 6T-3M	6000	2	40	210	D	965-232		963-132

Note: For applications that require verification, please order verification at the same time, initial verification at a later date is not possible. Verification at the factory, we need to know the full address of the location of use.

Pictograms

<p>Internal adjusting: Quick setting up of the balance's accuracy with internal adjusting weight (motordriven)</p>	<p>KERN Communication Protocol (KCP): It is a standardized interface command set for KERN balances and other instruments, which allows retrieving and controlling all relevant parameters and functions of the device. KERN devices featuring KCP are thus easily integrated with computers, industrial controllers and other digital systems</p>	<p>Protection against dust and water splashes IPxx: The type of protection is shown in the pictogram.</p>
<p>Adjusting program CAL: For quick setting up of the balance's accuracy. External adjusting weight required</p>	<p>GLP/ISO log: The balance displays serial number, user ID, weight, date and time, regardless of a printer connection</p>	<p>Stainless steel: The balance is protected against corrosion</p>
<p>Easy Touch: Suitable for the connection, data transmission and control through PC, tablet or smartphone</p>	<p>GLP/ISO log: With weight, date and time. Only with KERN printers</p>	<p>Suspended weighing: Load support with hook on the underside of the balance</p>
<p>Memory: Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.</p>	<p>Piece counting: Reference quantities selectable. Display can be switched from piece to weight</p>	<p>Battery operation: Ready for battery operation. The battery type is specified for each device</p>
<p>Alibi memory: Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard.</p>	<p>Recipe level A: The weights of the recipe ingredients can be added together and the total weight of the recipe can be printed out</p>	<p>Rechargeable battery pack: Rechargeable set</p>
<p>Data interface RS-232: To connect the balance to a printer, PC or network</p>	<p>Recipe level B: Internal memory for complete recipes with name and target value of the recipe ingredients. User guidance through display</p>	<p>Universal mains adapter: with universal input and optional input socket adapters for A) EU, CH; B) EU, CH, GB, USA; C) EU, CH, GB, USA, AUS</p>
<p>RS-485 data interface: To connect the balance to a printer, PC or other peripherals. Suitable for data transfer over large distances. Network in bus topology is possible</p>	<p>Recipe level C: Internal memory for complete recipes with name and target value of the recipe ingredients. User guidance through display, multiplier function, adjustment of recipe when dosages are exceeded or barcode recognition</p>	<p>Mains adapter: 230V/50Hz in standard version for EU. On request GB, USA or AUS version available</p>
<p>USB data interface: To connect the balance to a printer, PC or other peripherals</p>	<p>Totalising level A: The weights of similar items can be added together and the total can be printed out</p>	<p>Power supply: Integrated in balance. 230V/50Hz standard EU. More standards e.g. GB, USA or AUS on request</p>
<p>Bluetooth* data interface: To transfer data from the balance to a printer, PC or other peripherals</p>	<p>Percentage determination: Determining the deviation in % from the target value (100 %)</p>	<p>Weighing principle: Strain gauges Electrical resistor on an elastic deforming body</p>
<p>WLAN data interface: To transfer data from the balance to a printer, PC or other peripherals</p>	<p>Weighing units: Can be switched to e.g. nonmetric units at the touch of a key. See balance model. Please refer to KERN's website for more details</p>	<p>Weighing principle: Tuning fork: A resonating body is electromagnetically excited, causing it to oscillate</p>
<p>Control outputs (optocoupler, digital I/O): To connect relays, signal lamps, valves, etc.</p>	<p>Weighing with tolerance range: (Checkweighing) Upper and lower limiting can be programmed individually, e.g. for sorting and dosing. The process is supported by an audible or visual signal, see the relevant model</p>	<p>Weighing principle: Electromagnetic force compensation Coil inside a permanent magnet. For the most accurate weighings</p>
<p>Analogue interface: to connect a suitable peripheral device for analogue processing of the measurements</p>	<p>Hold function: (Animal weighing program) When the weighing conditions are unstable, a stable weight is calculated as an average value</p>	<p>Weighing principle: Single cell technology: Advanced version of the force compensation principle with the highest level of precision</p>
<p>Interface for second balance: For direct connection of a second balance</p>		<p>Verification possible: The time required for verification is specified in the pictogram</p>
<p>Network interface: For connecting the scale to an Ethernet network</p>		<p>DAkKS calibration possible: The time required for DAkKS calibration is shown in days in the pictogram</p>
<p>Wireless data transfer: between the weighing unit and the evaluation unit using an integrated radio module</p>		<p>Package shipment: The time required for internal shipping preparations is shown in days in the pictogram</p>
		<p>Pallet shipment: The time required for internal shipping preparations is shown in days in the pictogram</p>

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KERN & SOHN GmbH is under license. Other trademarks and trade names are those of their respective owners.

KERN – Precision is our business

To ensure the high precision of your balance KERN offers you the the appropriate test weight in the international OIML error limit classes E1-M3 from 1 mg - 2500 kg. In combination with a DAkKS calibration certificate the best pre-requisite for proper balance calibration.

The KERN DAkKS calibration laboratory today is one of the most modern and best-equipped DAkKS calibration laboratories for balances, test weights and force-measurement in Europe.

Thanks to the high level of automation, we can carry out DAkKS calibration of balances, test weights and force-measuring devices 24 hours a day, 7 days a week.

Range of services:

- DAkKS calibration of balances with a maximum load of up to 50 t
- DAkKS calibration of weights in the range of 1 mg - 2500 kg
- Volume determination and measuring of magnetic susceptibility (magnetic characteristics) for test weights
- Database supported management of checking equipment and reminder service
- Calibration of force-measuring devices
- DAkKS calibration certificates in the following languages DE, GB, FR, IT, ES, NL, PL
- Conformity evaluation and reverification of balances and test weights

Your KERN specialist dealer: